



Fitting Instructions for the Rearshield

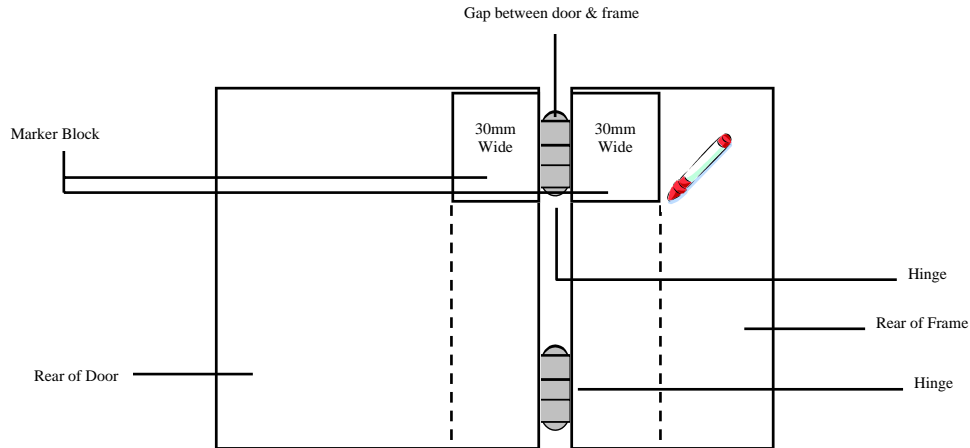

Steps 1 and 2: With the door in the closed position, use a pencil/pen to draw a guideline on the door frame using the 30mm wooden measuring block (provided). Simply repeat the procedure on the door to produce a second guideline.

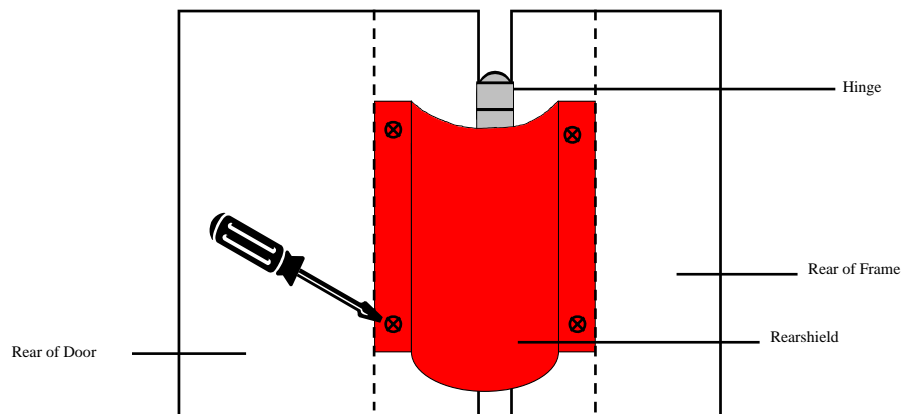

Steps 3 and 4: Remove the protective coating from the tape. Line up the edge of the Rearshield parallel to the guideline on the frame. Press firmly to hold in position before finally securing with the screws provided. Repeat this procedure to attach the Rearshield device to the door. **Please note:** When/if a screw hole does not correspond within 1 inch or so of the top or bottom of the device, please simply fit an extra screw at or near end of device.

REARSHIELD INFORMATION AND USER GUIDE

Maintenance

The only maintenance that your Rearshield device requires is an occasional wipe over with a clean damp cloth.

Important points to note

Once installed the Rearshield can be removed for door maintenance by unscrewing the exposed screw fixing from the door side, therefore enabling you to gain access to the door and hinges.

Once the maintenance work has been carried out, replace the device as shown in the fitting instructions.

If in rare circumstances the door is being replaced, then simply do as above, and refit to new door as before.

In buildings where trolleys, wheelchairs and mobile stretchers are used, staff must be warned to avoid striking the Rearshield device with excessive force, as this may lead to damage.

The constant kicking or striking of the Rearshield device could cause the device to rip, tear, or be dislodged from its fixing.

FINGERSHIELD SAFETY (UK) CANNOT BE RESPONSIBLE FOR THIS TYPE OF DAMAGE HOWEVER CAUSED BY USER MISUSE. PLEASE BE ADVISED.